TECHNICAL DATASHEET BRASS GAS BALL VALVE





Item No.: HC-61011

1 CERTIFICATION INFORMATION

Declaration of conformity: DHCW Certified.



PRODUCT BASICS

Product Name: BRASS BALL VALVE (FXF series)

Purpose: It is used as a shut-off valve in pipeline systems, transporting any media that are not aggressive to the materials of the product.

Manufacturer (supplier): HOME CREATOR TECHNOLOGY CO. LTD.

MAIN TECHNICAL DATA AND CHARACTERISTICS

3.1 SPECIFICATIONS

Connect	1/2"	3/4"	1"	11/4"	11/2"	2"		
Nominal o	15	20	25	32	40	50		
Nominal p	2.5	2.5	2.5	2.5	2.5	2.5		
Operating temperature range, °C			-20 to +120					
Ambient temperature, °C			-20 to +60					
Maximum ford		10						
Sea		Class "A"						
Connection		Parallel						
		30 years old						
Uptime	average full resource		55,000 cycles					
Орите	MTBF		25,000 cycles					

3.2 MATERIAL OF MANUFACTURE AND CONSTRUCTION BALL SERIES

Female-Female thread (FxF)



Name	Material		
Body (1)	Brass BS EN 12165 CW617N		
Bonnet (2)	Brass BS EN 12165 CW617N		
Seat (3)	PTFE		
Ball (4)	Brass		
Stem (5)	Brass		
0-Ring (6)	NBR (EN549 Certificate)		
Handle (7)	Q235		
Lock Nut (8)	SS304		

- HOME CREATOR brass products are made by hot stamping of brass grade CW617N as per the European standard EN12165.
 Sealing products are made of PTFE according to the European standard EN 13000-2.
- 3. The handle-lever is made of steel grade \$235 according to the European standard EN 10025-2.

3.3 BALL VALVE LEAVER HANDLE

Female-Female thread (FxF)



3.4 CROSS SECTION

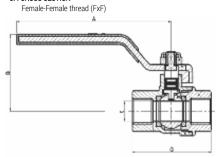


Table 4

Item	DN	Size	Overall dimensions, mm					
item	DN	Size	A	В	C	G		
HC-61011	10	1/4"	89	38	10	46		
HC-61011	12	3/8"	89	39	12	56		
HC-61011	15	1/2"	89	42	15	58		
HC-61011	20	3/4"	89	46	20	67		
HC-61011	25	1"	112	60	25	81		
HC-61011	32	1 1/4"	131	70	32	95		
HC-61011	40	1 1/2"	131	76	40	103		
HC-61011	50	2"	160	83	50	126		




3.6 MAXIMUM PRESSURE CONDITIONS

Female-Female thread (FxF)

Table 5

	Max	Min/Max	Test F	Test Pressure Max Pressure Min/Max		Min/Max	Test Pressure		
Size	Pressure (bar)	Temperature (°C)	Shell (bar)	Seat (bar)	(psi)	Temperature (°F)	Shell (psi)	Seat (psi)	
1/4" to 2"	25	-20°C + 120°C	37.5	27.5	362.6	-4 °F +248 °F	543.9	398.9	

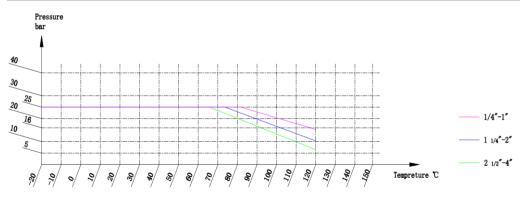

4 INSTALLATION AND OPERATION

- 4.1 Installation of a ball valve should be carried out by a specialist or a specialized organization in accordance with the Installation Requirement Notes (IRNs) " water regulation approval schedule."
- 4.2 The ball valve can be installed in any mounting position, both horizontal and vertical. Any direction of the working medium is allowed.
- 4.3 Sealing of threaded connections should be carried out using standard sealing materials.
- 4.4 The ball valve should not experience loads from the pipeline (when bending, compressing, stretching, torsion, braiding, vibration, uneven tightening of the fasteners, etc.)
- 4.5 Upon completion of the installation work, it is necessary to carry out individual tests of the equipment with the preparation of the act.
- 4.6 The ball valves shall be operated in accordance with the characteristics specified in paragraph 3, of this technical passport.
- 4.7 When installing a valve, in order to prevent the formation of cracks and chips on the coupling ends of the valve, as well as deformation of the valve body or depressurization of the connection point of the semi-hulls, it is recommended to use standard carob Kevs.
- 4.8 During installation, when tightening the valve, the key must be captured by the hexagon of the housing closest to the connection thread. It is not allowed to exceed the tightening moments indicated in the table below:

Size, inch	1/2"	3/4"	1"	11/4"	11/2"	2"
Maximum torque, N·m	40	68	100	128	160	200

- 4.9 To exclude possible contaminants associated with the installation of the valve (excess sealing material, paste, etc.) into the internal cavities of the tap, the valve should be mounted in a fully open position.
- 4.10 The ball valve has only two operating positions: fully open or fully closed. It is not allowed to use HOME CREATOR ball valves as control valves, this can lead to a reduction in service life.
- 4.11 In the case of using the valve in pipeline systems with a high content of mechanical impurities, it is recommended to additionally mount a U-shaped filter for cleaning HOME CREATOR (Art. HC-301).

DESCRIPTION AND WORK

The ball valve blocks the flow of the transported medium with a spherical gate shape. The shutter rotates 90 degrees by transmitting torque from the crane handle through the rod. The bolt has seals on the sides of the outlet pipes and rod.

6 MAINTENANCE

- 6.1 Articles must be operated within the values specified in para, 3, para, 4 of this technical passport.
- 6.2 To extend the service life of sealing elements, it is recommended to open / close the HOME CREATOR ball valve at least 1 time in 6 months,

STORAGE AND TRANSPORTATION CONDITIONS

Products are transported in the packaging of the manufacturer in accordance with the rules operating on the mode of transport used.

8 RESOURCES, LIFETIMES AND MANUFACTURER'S (SUPPLIER'S) WARRANTIES

- 8.1 Average full service life of a ball valve: 30 years.
- 8.2 The manufacturer (supplier) guarantees the operability and compliance with the safety requirements of the product if the consumer complies with this technical passport HC-61011.
- 8.3 Warranty period: 36 months from the date of sale to the end user / from the date of commissioning of the object. The warranty covers all defects caused by the manufacturer
- 8.4 When making claims about the guality of the goods, the buyer provides the following documents:
- 8.4.1 An application in any form, which indicates:
- a) Name of the organization or F. And. About. buyer, actual address, contact phone number;
- b) The name and address of the organization that carried out the installation of the product; c) a brief description of the malfunction of the product.

- 8.4.2 A document confirming the purchase of the product (cash/sales receipt, waybill, receipt, etc.).
- 8.4.3 Photos of the product confirming its malfunction, or the product itself.
- 8.4.4 Act of hydraulic testing of the system in which the product was mounted.
- 8.4.5 Completed warranty card.
- 8.5 The warranty does not cover defects arising from:
- 8.5.1 Violations of the passport regimes of storage, transportation, installation and operation of the product.
- 8.5.2 The presence of traces of extraneous interference in the design of the product.
- 8.5.3 Effects of substances aggressive to the materials of the product.
- 8.5.4 Effects on the product of excessive force.
- 8.5.5 Impact on the product of fire, natural disasters and other force majeure circumstances.
- 8.6 The warranty also does not apply in cases where the manufacturer's markings are partially or completely changed erased, removed or illegibly visible.
- 8.7 In case of unreasonableness of the claim, the costs of diagnostics and examination of the product are paid by the buyer.
- 8.8 Manufacturer HOME CREATOR TECHNOLOGY CO. LTD reserves the right to make changes to the design of the product that do not affect the declared technical characteristics
- 8.9 Claims for the quality of the goods can be made during the warranty period at the address of the manufacturer HOME CREATOR TECHNOLOGY CO., LTD.

CERTIFICATE OF ACCEPTANCE AND PACKAGING

- 9.1 Ball valves packed by the manufacturer.
- 9.2 Packaging ensures the safety of products subject to compliance with clause 7.
- 9.3 The materials and substances used for packaging are safe for people and the environment.
- 9.4 The ball valve is in the open position.
- 9.5 The batch of ball valves is recognized as suitable for operation and is accepted with 100% control at RPR = 2.5 * PW

Date of manufacture	QUALITY Mark	
---------------------	--------------	--








WARRANTY PERIOD: 36 MONTHS





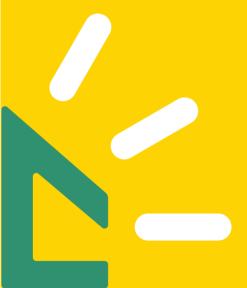

HOME CREATOR GROUP LTD LLONDON, UK

Add: 167-169 Great Portland Street, London, Email: sales@homecreatorgroup.com



















